















- Wird der neue Code abgelehnt, wird die Funktion sofort verlassen.
- Aus Sicherheitsgründen sollten Sie Benutzer nur bei geöffnetem Tresor anlegen. Bevor Sie den Tresor schließen, überprüfen Sie bitte die korrekte Funktionsweise des neuen Codes.
- Benutzernummer 9 für die Umgehung der Öffnungsverzögerung (Schnellöffnungscode) kann nur angelegt werden, wenn
  - Öffnungsverzögerung ausgeschaltet ist (siehe Sonderfunktion 9).
  - Öffnungsverzögerung eingeschaltet ist, Öffnungsverzögerungszeit abgelaufen ist und man sich im Öffnungsfenster befindet (siehe Sonderfunktion 9).

Sonderfunktion 1 starten	①	(2 Sek. ⏱)	💡 dauernd	✓ ■ ■	
Mastercode eingeben	① ② ③ ④ ⑤ ⑥	(Beispiel)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■
** Benutzernummer wählen - nun folgende Unterscheidung:	③	(Beispiel)			
- Benutzerauswahl OK			💡 dauernd	✓ ■ ■	
- Benutzer bereits angelegt	Abbruch		○ aus	✓ ■ ■	
- Benutzerauswahl nicht möglich	Abbruch		○ aus		✗ ■ ■ ■ ■
Neuen Code eingeben	⑥ ⑤ ④ ③ ② ①	(Beispiel)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■
Neuen Code erneut eingeben	⑥ ⑤ ④ ③ ② ①	(Beispiel)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■

## Sonderfunktion 2: Benutzer Ein- / Aus (Flash 5)

Alle Benutzer werden ein- oder ausgeschaltet.

### Hinweise:

- Nur mit Mastercode durchführbar.
- Sind die Benutzer ausgeschaltet, kann das Schloss nur noch mit dem Mastercode geöffnet werden.

Sonderfunktion 2 starten	②	(2 Sek. ⏱)	💡 dauernd	✓ ■ ■	
Mastercode eingeben	① ② ③ ④ ⑤ ⑥	(Beispiel)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■




\*\* Maximale Anzahl der Benutzer ist Flash-Version abhängig

### Sonderfunktion 3: Benutzer löschen

Diese Funktion ist für jeden Benutzer separat durchzuführen.

#### Hinweise:

- Nur mit Mastercode durchführbar.




Sonderfunktion 3 starten	③	(2 Sek.  )	 dauernd	✓ ■ ■	
Mastercode eingeben	① ② ③ ④ ⑤ ⑥	(Beispiel)	 dauernd	✓ ■ ■	✗ ■■■■
** Benutzernummer wählen - nun folgende Unterscheidung:	③	(Beispiel)			
- Benutzer gelöscht			O aus	✓ ■ ■	
- Benutzerauswahl nicht möglich	Abbruch		O aus		✗ ■■■■

### Sonderfunktion 6: Tastatur überprüfen

#### Hinweise:

Jede Taste der Reihe nacheinander einmal drücken. Mit 1 beginnen, dann 2 ... 8, 9, 0.

- Jede erkannte Taste wird durch doppelten Tastenton quittiert.
- Wird die nachfolgende Taste beim Drücken nicht erkannt => langer Ton und Abbruch der Testfunktion.

Sonderfunktion 6 starten	⑥	(2 Sek.  )	 dauernd	✓ ■ ■	
Taste 1 drücken	①		 dauernd	✓ ■ ■	✗ ■■■■
Taste 2 ... 8, 9, 0 drücken	② ... ⑧ ⑨ ⑩		 dauernd	✓ ■ ■	✗ ■■■■

\*\* Maximale Anzahl der Benutzer ist Flash-Version abhängig

### Sonderfunktion 7: Benutzerinfo

Diese Funktion gibt Ihnen einen Überblick über die Anzahl der freien bzw. verwendeten Benutzer.

#### Hinweise:

- Nur mit Mastercode durchführbar.

Sonderfunktion 7 starten	⑦	(2 Sek. ⏱)	💡 dauernd	✓ ■ ■	
Mastercode eingeben	① ② ③ ④ ⑤ ⑥	(Beispiel)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■
** Benutzernummer wählen - weitere Nummern wählen	③ ④ ⑦	(Beispiel) (Beispiel) (Beispiel)	💡 dauernd	■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■ ■	belegt frei nicht nutzbar
Abfrage beenden	①		0 aus	✓ ■ ■	

### Sonderfunktion 8: Reset

Mit dieser Funktion kann das Schloss auf die Werkseinstellung zurückgesetzt werden.

#### Hinweise:

- Nur mit Mastercode durchführbar.

Sonderfunktion 8 starten	⑧	(2 Sek. ⏱)	💡 dauernd	✓ ■ ■	
Mastercode eingeben	① ② ③ ④ ⑤ ⑥	(Beispiel)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■

### Bedienung mit Öffnungsverzögerung


#### Sonderfunktion 9: Öffnungsverzögerung einstellen

##### Öffnungsverzögerungszeit

- 01 bis 99 Minuten (2-stellig)  
Stellt die Funktion ein. Diese Zeit muss abgewartet werden, bevor sich das Schloss öffnen lässt.

##### Öffnungsfenster

- 01 bis 19 Minuten (2-stellig)  
Innerhalb dieser Zeit muss der Code erneut eingegeben werden, um das Schloss zu öffnen.

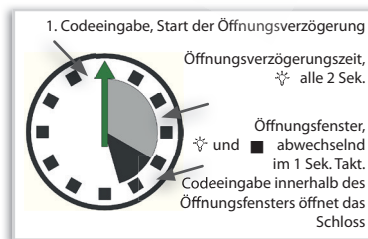

\*\* Maximale Anzahl der Benutzer ist Flash-Version abhängig





Code eingeben	⑥ ⑤ ④ ③ ② ①	(Beispiel)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■
Öffnungsverzögerungszeit läuft			alle 2 Sek. 💡		
Start Öffnungsfenster			💡 und ■ abwechs. im 1 Sek. Takt		
Sonderfunktion 9 starten	⑨	(2 Sek. ⏸)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■
Mastercode eingeben	① ② ③ ④ ⑤ ⑥	(Beispiel)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■
Öffnungsverzögerungszeit • Ausstellen: 00	⑩ ⑩	Funktion aus	💡 dauernd		
Öffnungsfenster Wert zwischen 01 und 19	⑩ ①	(Beispiel)	💡 dauernd	✓ ■ ■	
Eingabe wiederholen	⑩ ⑩ ⑩ ①	(Beispiel) (Beispiel)	O aus	✓ ■ ■	✗ ■ ■ ■ ■

### Öffnen mit aktivierter Öffnungsverzögerung

#### Hinweis:

- Die Eingabe eines ungültigen Codes innerhalb der Öffnungsverzögerungszeit bricht den gesamten Vorgang ab.
- Nur bei **Flash 4** sollten im Öffnungsfenster **zwei gültige Codes** eingegeben werden. (siehe Öffnen nach der Vieraugen-Identifikation).

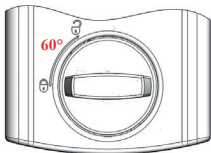Code eingeben	⑥ ⑤ ④ ③ ② ①	(Beispiel)	💡 dauernd	✓ ■ ■	✗ ■ ■ ■ ■
Öffnungsverzögerungszeit läuft			alle 2 Sek. 💡		
Start Öffnungsfenster			💡 und ■ abwechs. im 1 Sek. Takt		
Erneut gültigen Code eingeben (innerhalb des Öffnungsfensters)	⑥ ⑤ ④ ③ ② ①	(Beispiel)		✓ ■ ■	✗ ■ ■ ■ ■
Nach dem Signal für die richtige Eingabe Drehknopf innerhalb 3 Sek. im Uhrzeigersinn drehen					

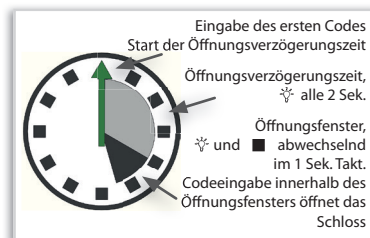


### Öffnen mit Umgehung der aktivierten Öffnungsverzögerung (Schnellöffnungscode) (Flash 5)

**Hinweise:**

- Benutzer-Nr. 9 muss aktiv sein (siehe Sonderfunktion 1).
- Die Benutzer müssen eingeschaltet sein (siehe Sonderfunktion 2).
- Erster Code (Code zum Starten der Öffnungsverzögerung) darf nicht von Benutzer-Nr. 9 sein.

Code eingeben	⑥ ⑤ ④ ③ ② ①	(Beispiel)	💡 dauernd	✓	■ ■	✗ ■ ■ ■ ■
Öffnungsverzögerungszeit läuft			alle 2 Sek. 💡			
Code Benutzer-Nr. 9 eingeben	③ ② ① ⑥ ⑤ ④	(Beispiel)		✓	■ ■	✗ ■ ■ ■ ■
Nach dem Signal für die richtige Eingabe Drehknopf innerhalb 3 Sek. im Uhrzeigersinn drehen						

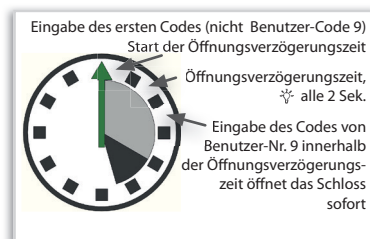

**NOTFUNKTION: Öffnen des Schlosses mit mechanischem Schlüssel**

Das TULOX-Elektronik-Tresorschloss-System wird mit einem mechanischen Schlüssel ausgeliefert. Mit Hilfe dieses Schlüssels kann das Schloss auch geöffnet werden, wenn Sie z. B. den gültigen elektronischen Öffnungscodes vergessen haben sollten.

**Sicherheitshinweise:**

- Der Schlüssel ist nach dem Verschließen stets abzuziehen, damit er Unbefugten nicht zugänglich ist.
- Der Schlüssel ist stets an einem sicheren Ort aufzubewahren.
- Bewahren Sie den Schlüssel nicht in Ihrem Tresor auf!
- Bei Schlüsselverlust ist das Schloss unverzüglich auszutauschen.
- Eventuelle Aufzeichnungen über die genutzten Codes müssen so aufbewahrt werden, dass sie keinem Dritten zugänglich sind.
- Bei der Codeeingabe ist darauf zu achten, dass die Eingabe nicht durch anwesende Personen beobachtet werden kann.



## Demontage der Tastatur

Das Schlüsselloch für das Schloss liegt hinter der Tastatur

Entfernen Sie die Abdeckkappe mit leichtem Zug.

Jetzt sehen Sie die Batterien und die Befestigungsschrauben.

Entfernen Sie die 2 Schrauben und ziehen Sie die Tastatur von der Tresorwand ab. Die Achse und das Kabel werden sichtbar.

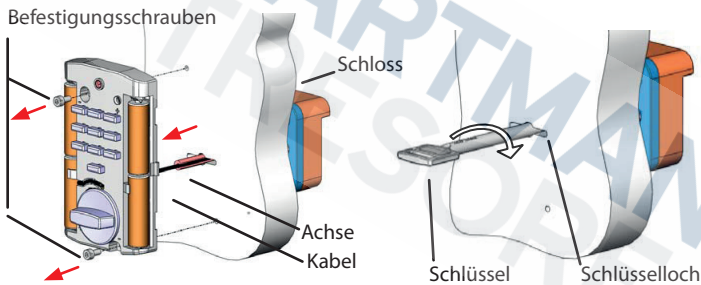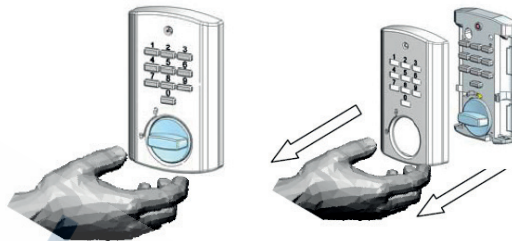

Je nach Montageart wurde das Kabel innerhalb der Achse in den Tresor verlegt (siehe Bild Seite 14) oder durch eine separate Bohrung.

Wenn das Kabel innerhalb der Achse verlegt wurde, müssen Sie das Kabel mit einem kurzen Ruck aus dem Schloss herausziehen. Erst dann können Sie die Tastatur mit Kabel zur Seite legen. Entfernen Sie die Achse aus dem Schlüsselloch. Jetzt ist das Schlüsselloch frei und Sie können das Schloss mit dem Schlüssel öffnen. Bevor das Schloss wieder durch Codeeingabe geöffnet werden kann, muss das Kabel ausgetauscht und ordnungsgemäß montiert werden. Rufen Sie hierfür einen Servicetechniker.

Wenn das Kabel durch eine separate Bohrung verlegt wurde, müssen Sie nur die Achse aus dem Schlüsselloch herausziehen. Jetzt ist das Schlüsselloch frei und Sie können das Schloss mit dem Schlüssel öffnen. Bevor das Schloss wieder durch Codeeingabe geöffnet werden kann, muss die Achse und die Tastatur ordnungsgemäß montiert werden.



## About this User Manual

Thank you for purchasing our TULOX Safe Lock System.

This product has been developed and produced carefully in Germany. It offers comfortable securing and operating of your safe. This TULOX User Manual has been written in particular to guide you step by step through the functions and operating options of your lock system.

- Please read this manual thoughtful to guaranty safe and correct usage.
- Please keep this manual for further reference.

## Index of Contents

Flash-version TULOX 100	18
Symbols Used, Inserting / Changing Batteries	19
Opening / Opening after Dual Mode	20
Closing, Misentry Penalty	21
Changing a Code, Create User	22
User on/off	23
Delete User, Checking the Keypad	24
User Info, Reset, Operating with Opening Delay	25
Opening with Opening Delay activated	27
Opening Delay Override (Quick Open Code)	28
Emergency Function, Security Information	29
Removing the Keypad	30
Opening / Locking with a Key, Battery Warning	31

- Flash 4** Dual Mode, 1 Master, up to 9 Users, Opening Delay
- Changing a Code (Master Code and User Code) (Special Function 0)
  - Create User (Special Function 1)
  - Delete User (Special Function 3)
  - Checking the Keypad (Special Function 6)
  - User Information (Special Function 7)
  - Reset (Special Function 8)
  - Opening Delay (Special Function 9)
- Flash 5** 1 Master, up to 8 Users, Opening Delay, Fast Opening Code
- Changing a Code (Master Code and User Code) (Special Function 0)
  - Create User (Special Function 1)
  - User On / Off (Special Function 2)
  - Delete User (Special Function 3)
  - Checking the Keypad (Special Function 6)
  - User Information (Special Function 7)
  - Reset (Special Function 8)
  - Opening Delay (Special Function 9)
  - Opening Delay Override (Quick Open Code User 9)

**Symbols used**

✓	Entry OK	💡	LED on
✗	Entry wrong or denied	○	LED off
■	Short key tone, high	□	Short key tone, low
▬	Long key tone, high	2 sec. 🖱️	Press key for 2 sec.



**Inserting / Changing Batteries**

To insert or change batteries, take the cover off with slight tensile.

Insert new batteries (4x, 1.5V, alkaline, AA, mignon, LR6) in the keypad.


Make sure the right polarity is used, as indicated on the case.

**If the cover is not put on correctly, the lock cannot be operated.**

Dismounting the cover

Place cover on

**Be sure the keys are straight.**

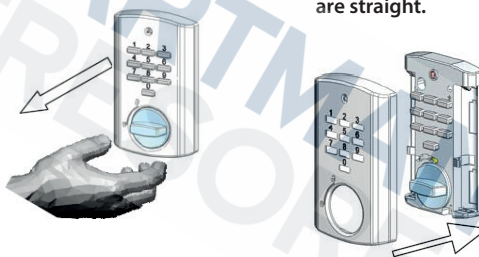

After the cover has been installed, the key tones will sound deeper until a valid code has been entered. If, despite the correct mounting of the cover, you hear deep tones, check the keyboard for possible tampering!



If the cabinet has an additional handle for opening, it must be turned all the way into locking position.

If this is not done, the electronic lock cannot be operated properly.

Only then enter the code, wait for the audible release indicator and turn the rotary handle clockwise to 60 degrees.


The electronic lock is now unbolted and the safe can be opened using the extra handle, if available.

### Opening

Upon leaving the factory, the lock's master code is configured as 1 – 2 – 3 – 4 – 5 – 6.  
For security reasons, change the factory configured master code immediately (see special function 0)!

#### Note:

- Entry is cancelled after 5 seconds have passed without a key being used

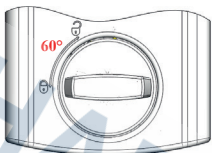
Enter code	① ② ③ ④ ⑤ ⑥	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■ ■ ■
After hearing the signal indicating correct entry, turn the rotary handle clockwise within 3 seconds.			

### Opening after Dual Mode Operation


Upon leaving the factory, the lock's master code is configured as 1 – 2 – 3 – 4 – 5 – 6.  
The lock can not be opened by factory configured master code entry only. It is necessary to set up an user after changing the factory configured master code (see special function 1).

#### Note:

- After first code entry the second code has to be entered within 5 seconds
- After invalid code entry two valid codes have to be entered

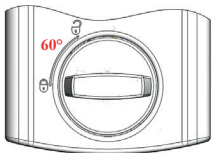Enter code	① ② ③ ④ ⑤ ⑥	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■ ■ ■
After hearing the signal indicating correct entry, turn the rotary handle clockwise within 3 seconds.			

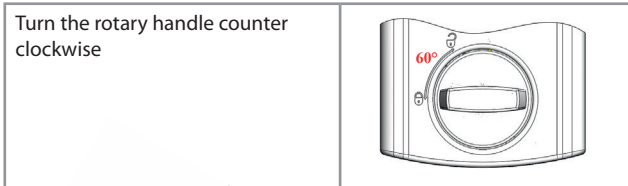

### Closing



After closing, make sure that the lock has locked properly!

### Misentry Penalty






After 4 invalid codes the entry is blocked for about 5 minutes. During this period the lock signals every 10 seconds. After this time penalty, the entry of every second invalid code initiates a new 5 minutes delay period.

<p>4 x incorrect code [ + 2 additional incorrect codes]</p>	<p>The lock cannot be accessed during lockdown (5 minutes)</p>	<p> every 10 sec.</p>	<p> on keystroke</p>
---	--	--	---

### Special Function 0: Changing a Code (Master Code and User Code)

**Note:**

- The code must contain 6 digits.
- Do not use any personal or similarly known data, such as birthdays, for your code.
- Simple codes that are easy to guess, may not be used.  
Avoid to record the selected code or save to disk. Should that for various reasons can not be avoid, so the recorded code is to be kept safe and to be protected against unauthorized access by third parties.
- New codes will be rejected if
  - the new code deviates from an existing code by only one digit
  - the new code is identical to the code of a deactivated user (see special function 3)
- If the new code is rejected, the programme will exit the function immediately.
- For security reasons, you should only change the code when the safe's door is open. Please check that the new code is functioning properly before closing the door.

Start special function 0	①	(2 sec.  )	 constant	✓ ■ ■	
Enter old code	① ② ③ ④ ⑤ ⑥	(example)	 constant	✓ ■ ■	
Enter new code	⑥ ⑤ ④ ③ ② ①	(example)	 constant	✓ ■ ■ ✗ ■ ■ ■ ■	
Re-enter new code	⑥ ⑤ ④ ③ ② ①	(example)	 constant	✓ ■ ■ ✗ ■ ■ ■ ■	







### Special Function 1: Create User

The only active user by factory settings is the user with the master code. Further users will have to be activated before they can operate the lock.

**Note:**

- Can only be executed with the master code .
- The new code must contain 6 digits.
- Do not use any personal or similarly known data, such as birthdays, for your code.
- Simple codes that are easy to guess, may not be used.  
Avoid to record the selected code or save to disk. Should that for various reasons can not be avoid, so the recorded code is to be kept safe and to be protected against unauthorized access by third parties.
- New codes will be rejected if
  - the new code deviates from an existing code by only one digit
  - the new code is identical to the code of a deactivated user (see special function 3)

- If the new code is rejected, the programme will exit the function immediately.
- For security reasons, you should only change the code when the safe's door is open. Please check that the new code is functioning properly before closing the door.
- User number 9 for bypassing opening delay (quick open code) can only be created if
  - Opening delay is switched off (see special function 9)
  - Opening delay is turned on, the opening delay time has passed and the time frame for opening is active (see special function 9)




Start special function 1	①	(2 sec.  )	 constant	✓ ■ ■	
Enter master code	① ② ③ ④ ⑤ ⑥	(example)	 constant	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■
** Select user number - with following differentiations:	③	(example)			
- User selection ok			 constant	✓ ■ ■	
- User already set-up	Cancel		O off	✓ ■ ■	
- User cannot be selected	Cancel		O off		✗ ■ ■ ■ ■ ■ ■
Enter new code	⑥ ⑤ ④ ③ ② ①	(example)	 constant	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■
Re-enter new code	⑥ ⑤ ④ ③ ② ①	(example)	 constant	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■

**Special Function 2: Turning Users on/off (Flash 5)**

All users are turned on or off.

**Note:**

- Can only be executed with the master code.
- The lock can only be opened with the master code when users are turned off.

Start special function 2	②	(2 sec.  )	 constant	✓ ■ ■	
Enter the master code	① ② ③ ④ ⑤ ⑥	(example)	 constant	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■




\*\* Maximum number of users subject to flash version

### Special Function 3: Delete User

This function has to be executed for each user separately.

#### Note:





- Can only be executed with the master code.

Start special function 3	③	(2 sec.  )	 constant	✓ ■ ■	
Enter master code	① ② ③ ④ ⑤ ⑥	(example)	 constant	✓ ■ ■	✗ ■■■■
** Select user number - with following differentiations:	③	(example)			
- User deleted			○ off	✓ ■ ■	
- User cannot be selected	Cancel		○ off		✗ ■■■■

### Special Function 6: Checking the Keypad

Press each key once in order. Start with 1, then 2 .... 8, 9, 0.

- Each key that is recognised will be confirmed with a double tone.
- If the next sequential key is not recognised when pressed => long tone and test function aborted.

Start special function 6	⑥	(2 sec.  )	 constant	✓ ■ ■	
Press key 1	①		 constant	✓ ■ ■	✗ ■■■■
Press key 2 ... 8, 9, 0	② ... ⑧ ⑨ ⑩		 constant	✓ ■ ■	✗ ■■■■





\*\* Maximum number of users subject to flash version

### Special Function 7: User Info

This function provides you with an overview of the number of user slots that are free / being used.

**Note:**

- Can only be executed with the master code.




Start special function 7	⑦	(2 sec.  )	 constant	✓ ■ ■	
Enter master code	① ② ③ ④ ⑤ ⑥	(example)	 constant	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■
** Select user number - select further numbers	③ ④ ⑦	(example) (example) (example)	 constant	■ ■ ■ ■ ■ ■ ■ ■ ■ ■	occupied vacant unusable
End query	①		O off	✓ ■ ■	

### Special Function 8: Reset

This function allows you to reset the lock to factory setting.

**Note**

- Can only be executed with the master code.

Start special function 8	⑧	(2 sec.  )	 constant	✓ ■ ■	
Enter master code	① ② ③ ④ ⑤ ⑥	(example)	 constant	✓ ■ ■	✗ ■ ■ ■ ■ ■ ■

### Operating with Opening Delay


#### Special Function 9: Configuring the Opening Delay

Configuring the opening delay

01 to 99 Minutes (2 digits)  
Turns on function. This is the amount of time that has to be waited before the lock can be opened.

Opening window



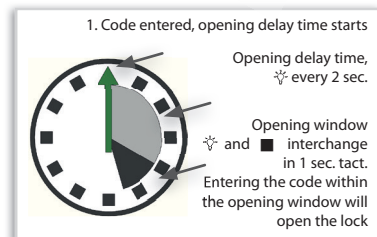


01 bis 19 Minutes (2 digits)  
The code must be re-entered within this amount of time in order to open the lock.



\*\* Maximum number of users subject to flash version

**Note:**

- Can only be executed with the master code.
- A shorter opening delay time has to be entered during the opening window (after the opening delay has passed).
- If the function is called up prior to or during the opening delay time, the opening delay time can only be extended. Shorter times will not be accepted.
- After the times have been changed, the opening window will continue to run. Code entry for opening is possible.
- Entry of two valid codes within the opening window with **Flash 4** only (see **Opening after Dual Mode Operation**).

Start special function 9	⑨	(2 sec.  )	 constant	✓ ■■	
Enter master code	① ② ③ ④ ⑤ ⑥	(example)	 constant	✓ ■■	✗ ■■■■
Opening delay time • for example, 20 min	② ①	(example)	 constant		
Opening window • for example, 7 min	① ⑦	(example)	 constant	✓ ■■	
Repeat entry	② ① ① ⑦	(example) (example)	O off	✓ ■■	✗ ■■■■

**Special Function 9: Turning off the Opening Delay**

Opening delay time

00 will turn off the function

Opening window

01 to 19 must not have a value of 00

**Note:**

- Can only be executed with the master code.
- This function can only be turned off during the opening window (after the opening delay time has passed).
- After this function has been turned off, the opening window will run for one last time. Code entry for opening is possible.


Enter code	⑥ ⑤ ④ ③ ② ①	(example)	💡 constant	✓ ■ ■	✗ ■ ■ ■ ■
Aperture delay time is running			ev. 2 sec. 💡		
Start Opening window			💡 and ■ alt. in 1 second clock		
Special function 9 starts	⑨	(2 sec. 🗣️)	💡 constant	✓ ■ ■	✗ ■ ■ ■ ■
Master code	① ② ③ ④ ⑤ ⑥	(example)	💡 constant	✓ ■ ■	✗ ■ ■ ■ ■
Opening delay • exhibit: 00	⑩ ⑩	function off	💡 constant		
Opening window Value between 01 und 19	⑩ ①	(example)	💡 constant	✓ ■ ■	
Repeat entry	⑩ ⑩ ⑩ ①	(example) (example)	0 off	✓ ■ ■	✗ ■ ■ ■ ■

**Opening with Opening Delay activated**

**Note:**

- Entering an invalid code during the opening delay time will cancel the entire process
- Entry of two valid codes within the opening window with Flash 4 only (see **Opening after Dual Mode Operation**).

Enter code	⑥ ⑤ ④ ③ ② ①	(example)	💡 constant	✓ ■ ■	✗ ■ ■ ■ ■
Opening delay time is running			ev. 2 sec. 💡		
Opening window starts			💡 and ■ alt. in 1 second clock		
Re-enter valid code (within the opening window)	⑥ ⑤ ④ ③ ② ①	(example)		✓ ■ ■	✗ ■ ■ ■ ■
After hearing the signal indicating correct entry, turn the rotary handle clockwise within 3 seconds					

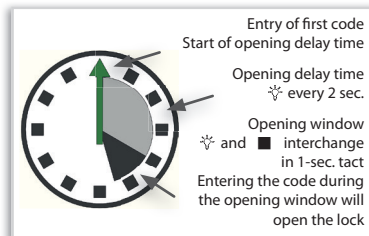


### Opening Delay Override (Quick Open Code) (Flash 5)

**Note:**

- User no. 9 must be active (see special function 1).
- Users must be turned on (see special function 2).
- The first code (code for starting the opening delay) may not be user no. 9's code.

Enter the code	⑥ ⑤ ④ ③ ② ①	(example)	⚡ constant	✓	■	✗
Time delay time is running			ev. 2 sec. ⚡			
Enter user no. 9's code	③ ② ① ⑥ ⑤ ④	(example)		✓	■	✗
After hearing the signal indicating correct entry, turn the rotary handle clockwise within 3 seconds						

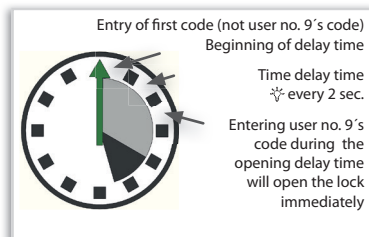

**EMERGENCY FUNCTION: Opening the Lock with a Mechanical Key**

The TULOX electronic safe lock comes with a mechanical key. This key can be used to open the safe even, for example, when you have forgotten the valid electronic opening code.

**Security Information:**

- The key must always be taken out after locking so that it is not accessible to unauthorised persons.
- The key must always be kept in a safe place.
- Do not keep the key in your safe!
- If the key is lost, replace the lock immediately.
- Any records of the used Code shall be stowed in a way that they are not accessible to third parties.
- When entering the code, make sure that the input can not be observed by bystanders.

HARTMANN  
TRESORE



### Removing the Keypad

The keyhole for the lock is behind the keypad.

Take the cover off with slight tensile.

Now you will see the batteries and the attachment screws.

Remove the 2 screws and pull the keypad off the safe wall. The axis and the cable will become visible.

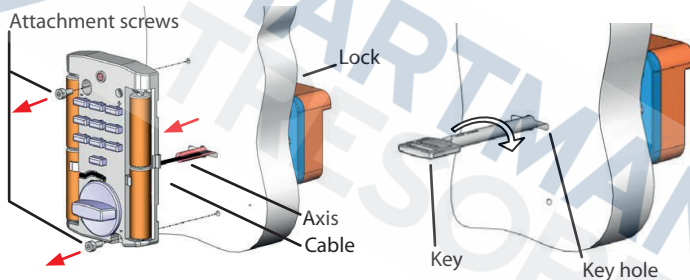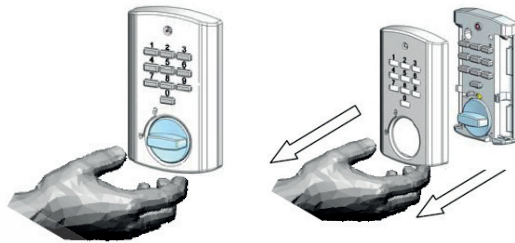

Depending on the type of mounting, the cable has been run through the axis (see image on page 29) or through a separate drilled hole.

If the cable has been run through the axis, then you will have to pull the cable out with a start. Only then will you be able to lay the keypad to the side. Remove the axis from the keyhole. Now the keyhole is free and you can open the lock using the key. Before the lock can be opened again by entering a code, the cable has to be replaced and assembled properly. Call a service technician to do this.

If the cable has been run through a separate drill hole, then you will only have to pull the axis through the key hole. Now the keyhole is free and you can open the lock using the key. Before the lock can be opened again by entering a code, the axis and the keypad have to be replaced and assembled properly.

### Opening with a Key

Insert the key all the way into the lock. The lock is opened by turning the key ca. 170° in a clockwise direction. The key is used to move the lock only.

When using the key to pull the door open, please be aware that the key can only take on a limited amount of force. Applying too much force can cause damage to the lock and the key.

### Locking with a Key

Locking is done in the opposite procedure as opening.

### Battery Warning

First step:

If the batteries reach a critically low level of charge, there will be an early warning of several signal tones after successful code entering. Replace the batteries (4x, 1.5V, alkaline, AA, mignon, LR6).

■■■■■■■■ after opening

Second step:

At this stage the supply voltage has reached a critically low level, therefore an opening is no longer possible. Already after entry of the first digit you receive several acoustic warnings. Replace the batteries (4x, 1.5V, alkaline, AA, mignon, LR6).

■■■■■■■■ before opening



HARTMANN  
TRESORE

Carl Wittkopp GmbH  
Konrad-Zuse-Str. 5  
42551 Velbert  
Deutschland

Telefon +49(0)2051 9566 0  
Telefax +49(0)2051 9566 66  
E-Mail [info@carl-wittkopp.com](mailto:info@carl-wittkopp.com)  
Internet [www.carl-wittkopp.com](http://www.carl-wittkopp.com)

03/2021 Printed in Germany.

Zumutbare Abweichungen in Modellen und Farben sowie Änderungen zur Anpassung an den neuesten Stand der Technik und Produktion bleiben ausdrücklich vorbehalten.

© Carl Wittkopp GmbH

Dieses Handbuch darf weder als Ganzes noch in Auszügen ohne schriftliche Genehmigung von Carl Wittkopp reproduziert, vertrieben, übersetzt oder in anderer Art und Weise oder mit anderen Mitteln elektronischer oder mechanischer Art übertragen werden. Dies schließt Fotokopien, Aufzeichnungen oder Speichern in jedweder Art ein.